PRO-C™ CONTROLLER

PROGRAMMING INSTRUCTIONS



SETTING THE DATE AND TIME

- 1 Turn dial to the Date/Time position.
- 2 YEAR: Press and to change the vear, Press to advance to MONTH.
- **3 MONTH:** Press ◆ and ◆ to change the month. Press ◆ to advance to DAY.
- **4** DAY: Press ◆ and ◆ to change the date. Press ◆ to advance to TIME.
- TIME: Press and to select AM, PM, or 24 HR. Press to select hour. Press and to change the hour shown on the display. Press to advance minutes. Press and to change the minutes.

The date and time have now been set.

SETTING PROGRAM START TIME

NOTE: A single watering start time will activate the program (A,B, or C) and all stations assigned to the program will run sequentially.

- 1 Turn dial to the Start Times position.
- 2 Select program A, B, or C by pressing .
- 3 Press or to change the start time.
- ◆ Press ◆ to select the next start time, or ◆ for the next program.

To eliminate a programmed start time:

Press ◆ or ◆ to set the start time to OFF
(which is between 11:45 PM and midnight).

SETTING STATION RUN TIMES (WATERING DURATION)

- 1 Turn the dial to the Run Times position.
- Select program A, B, or C by pressing
- The display will show the station number and the program letter selected. The run time will flash.
- 4 Press and to increase or decrease the run time.
- ⑤ Press ◆ to advance to the next station.
- 6 Repeat steps 4 and 5 for each station.

SETTING DAYS TO WATER

- 1 Turn the dial to the Water Days position.
- There are four different water day options: specific days of the week, interval days, even days, or odd days.
- With the arrow cursor on a specific day, press to enable that day for watering. Press to deselect any water days. Press the button to select watering days for each program (A, B, or C).

Please refer to Owner's Manual for interval and odd or even day scheduling.

RAIN SENSOR BYPASS SWITCH

If a sensor is preventing system operation, OFF will be displayed along with an umbrella icon. Press the Sensor Bypass button to bypass the sensor status.

The Sensor Bypass is only enabled for 24 hours before reverting to an active sensor status.

SEASONAL ADJUSTMENT

- 1 Turn dial to the Seasonal Adjust position.
- Press and to change the seasonal adjustment from 5% to 300% in 5% increments. The station run times displayed will automatically be recalculated to account for the adjustment factor.

CLEARING MEMORY/RESETTING CONTROLLER

Reset the controller to factory default settings.

- 1 Hold down the 🗫 button.
- While holding down the button, press and release the reset button on the back of the front panel, wait until the display reads 12:00 AM, then release the button.
- 3 All the memory has been cleared and the controller may be reprogrammed.

MANUALLY OPERATING A SINGLE STATION

- 1 Turn dial to the Manual position.
- ② Station run time will flash in the display. Press to select the desired station. Press and to set the watering duration.
- Turn the dial to the RUN position to activate the station. (Individual station will water, then controller will return to automatic mode.)

ONE TOUCH MANUAL START

- With the dial in the RUN position, hold down the ◆ button for 2 seconds.
- This feature automatically defaults to program A. You can select program B or C by pressing the program.
- 3 The station number will flash. Quickly press the ◆ and ◆ button to scroll through the stations and use the ◆ and ◆ buttons to adjust the station run times. (If no buttons are pressed during step 2 or 3, the controller will automatically begin program A.)
- Press the button to scroll to the station you wish to begin with. After a 2-second pause, the program will begin. When the station is running you will see a flashing f on the display.

TROUBLESHOOTING - SENSOR SETUP



hunter.help/ProCSupport

WATERING SCHEDULE

PROGRAMS	A	В	С
WATER DAYS	M T W T F S S	M T W T F S S	M T W T F S S
START TIME(S) Set the time(s) to			
start the program's watering cycle(s). 2			
Only one program start time is needed to run the cycle.			
STATION Location	Station Run Time	Station Run Time	Station Run Time
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22 23			
24			
25			
26			
27			
28			
29			
30			
31			
32			

hunterindustries.com
P/N: 700765 RC-203 EN A 3/23

PRO-C2 | Hunter[®]